
Reolink

CX410W

ColorX 2K 4MP Wi-Fi security camera with true full-color night vision, intelligent detection, customizable warm light

- 2K 4MP High Resolution with HDR
- · 2.4/5 GHz Dual-Band Wi-Fi
- · Person/Vehicle/Animal Detection

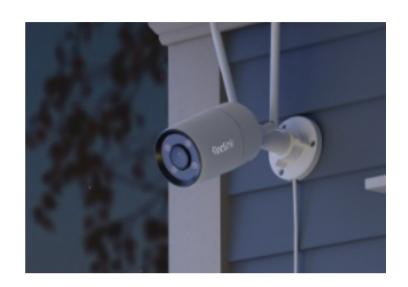

Specifications

Video & Audio	
Image Sensor	1/1.8" CMOS sensor
Resolution	2560X1440(4Megapixels)@20FPS
Lens	f=4.0mm fixed, F=1.0
Video Compression	H.264
Field of View	Horizontal: 89°; Vertical: 46°
Infrared Night Vision	N/A
Color Night Vision	With spotlights: 4pcs/3W/3000K
Frame Rate	Main stream: 2fps - 25fps (default: 20fps) Sub stream: 4fps - 15fps (default: 10fps)
Code Rate	Main stream: 2048Kbps - 4096Kbps (default: 3072Kbps) Sub stream: 64Kbps - 512Kbps (default: 256Kbps)
Audio	Two-way audio
Power Requirements	


DC Power	DC 12.0V圖1A, <12W	
Interface		
Power Port	DC power port	
Ethernet Port	One 10M/100Mbps; RJ45	
SD Card Slot	Supports Max. 512GB microSD card	
Reset Button	YES	
Audio In/Out	Built-in microphone and speaker	
Wi-Fi		
Wireless Standard	IEEE 802.11 ac/a/b/g/n	
Operating Frequency	2.4GHz/5GHz	
Wireless Security	WPA-PSK/WPA2-PSK	
Software		
Browsers Supported	Edge, Chrome, Firefox, Safari	
OS Supported	PC: Windows, Mac OS; Smartphone: iOS, Android	
Protocols & Standards	HTTPS, SSL, TCP/IP, UDP, HTTP, IPv4, UPnP, RTSP, RTMP, ONVIF, SMTP, NTP, DHCP, DNS, DDNS, FTP, P2P	
User Access	Max. 20 users (1 admin & 19 user); Max. 12 simultaneous streams (2 main & 10 sub streams)	
Other Features		
Smart Alarm	Motion detection; person detection; vehicle detection; animal detection	
Recording Modes	Motion-triggered recording (default); Scheduled recording, 24/7 recording	
Time Lapse	YES	
Smart Home Compatibility	Google Assistant	
Working Environment		
Operating Temperature	-10°C~55°C (14°F~131°F)	
Operating Humidity	10% ~ 90%	

Weatherproof	IP67	
Mechanical		
Dimensions	Φ67*187mm	
Weight	486g	
Warranty		
Limited Warranty	2-year limited warranty. For support, visit https://support.reolink.com/hc/en-us/.	

Gallery & Specs



- 1. Antenna
- 2. Aluminum housing
- 3. 3000K warm light
- 4. Lens
- 5. Mounting bracket
- 6. Speaker
- 7. Microphone
- 8. microSD card slot

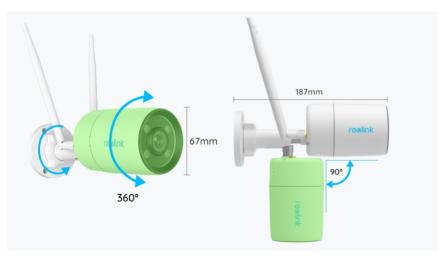

1. Turn the adjustment knob counterclockwise to loosen the bracket and adjust the camera in any direction.

or> 2. After adjusting, turn the adjustment knob back (clockwise) to secure the camera in place.



- 1. Power port
- 2. Reset button
- 3. Network port
- 4. Waterproof lid

www.reolink.com